

5150 Eucalyptus Avenue Unit A  
Chino, Ca. 91710  
888.360.3696  
www.anzousa.com

2012-2014 Tacoma



Completely read all the instructions before installation  
Improper installation will void warranty!

### Step 1



Tools needed: 10mm Socket

### Step 4



Remove the plastic piece carefully by unclipping it and pulling it towards the grill located

### Step 7



Remove the headlight

### Step 10




### Step 2




Remove 4 bolts located on top of the grill

### Step 5

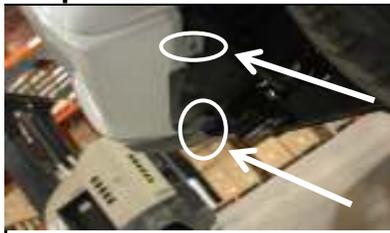

Remove 2 bolts located on each side in the bottom of the bumper

### Step 8

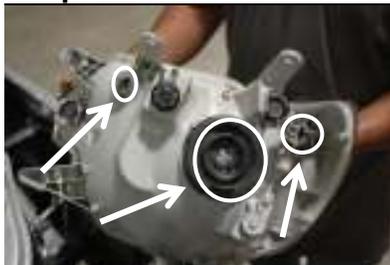


Once the headlight is out remove the turn signal harness, the parking lights harness and the low/high beam light harness

### Step 11




### Step 3

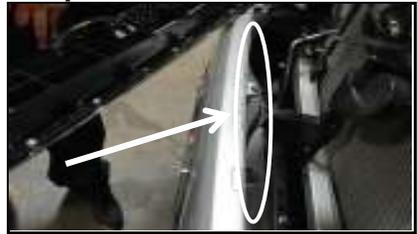

Unclipe the grill carefully from the bumper

### Step 6

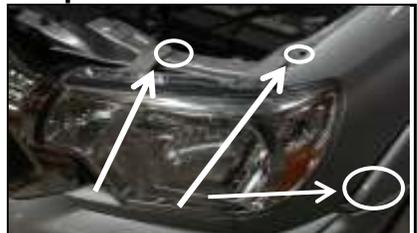

Remove 2 bolts located on top of the headlight and 1 bolt located


### Step 9



Remove plastic peice located on the side of the headlight

### Step 12





Install the plastic peice removed  
from step 9



Insatll the headlight by reversing  
step 8 and step 7



Test all functions before operating  
the vehicle

*information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.*

© 2008 AnzoUSA™. All rights reserved.